


# Operating Instructions for use of MARTOR-MEGASAFE



## Handling and use:



Never use when lock rocker is not activated!

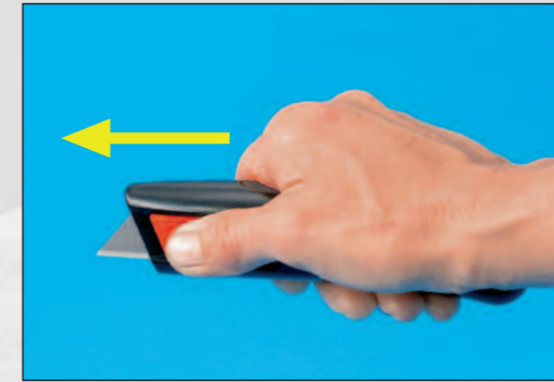

Push the side slider to expose the blade ready for cutting.



Insert the blade into the material, eg cardboard and continue to cut.



This cutter also features the time-tested MARTOR SAFETY technology in that the spring-loaded blade retracts instantly the moment blade edge contact is lost. Even if and when the user holds on to the blade push.

## Blade change:



Push the lock rocker down.



Move the blade push into the most forward position. Right- and lefthanders both pay special attention to the fact that the **transparent blade retaining plate must be always on top!**



Reverse or change the blade. Make sure you position the new or turned blade exactly over the locating lugs.



Let go of the blade push and activate the lock rocker. Never cut, when lock rocker is in the position (see picture).



Finally, work the slider to check that the auto-retract mechanism is working smoothly.



Blade change from front end only! Screw at the end of handle **ONLY** to be removed for cleaning purposes!

**IMPROVED SAFETY Concept:** The safety system responds even if the blade is only partially extended – the maximum extension is 27 mm.



To keep the automatic safety function fully active, it is important to ensure that the cutter is clean and free from any material residue at all times.

## CAUTION - Risk of cutting accidents!



1. Never hold the cutter at the blade outlet!
2. Always hold the blade at its back – NEVER at its edge!
3. Never throw used blades into the wastepaper! High risk of injury!

## Waste management of blades:



MARTOR SAFEBOX No. 108000 - another novel contribution to SAFETY: Designed to snap-off used blade sections and/or to SAFE - keep used blades (max. length 62 mm). To empty the contents, fold the "outer case" back by 180 degrees.



The transparent cover can now be opened and the contents be emptied, preferably, into the MARTOR USED BLADE CONTAINER No. 9810 - WALL MOUNT BRACKET optional.

**MARTOR**  
Solingen

If you have any questions, please contact us.

Service-Partner: [www.martor.com/addresses](http://www.martor.com/addresses)  
Please visit our homepage [www.martor.com](http://www.martor.com)