

Operating Instructions for use of MARTOR-MARTego

MARTOR-MARTego

Automatic Blade Retraction System

The spring-loaded blade retracts automatically even if the user continues to hold the squeeze lever.

Blade change release

Easy tool-free blade change.



Squeeze lever

By pressing the lever, the blade extends out of the handle.

Circular blade path

The blade path pushes against the material being cut making it possible to cut soft materials such as foil and plastic bags - and the automatic blade retraction still works.

Safety lock

The squeeze lever can be locked, preventing the blade from accidentally extending.

= unlocked

= locked



Handling and use:



Unlock the red safety lock by depressing . Squeeze the lever to extend the blade.



Insert the blade in the material and initiate the cut.




Blade will automatically retract after the cut is complete - even if the user continues to hold the squeeze lever.



Engage the safety lock when not using the knife .

Blade change:

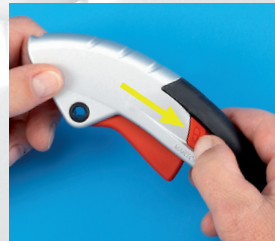

Begin with knife in locked position by depressing . Slide blade release button toward back of the knife.



Pull squeeze lever out and continue until it stops at the head of the knife.



Flip open black blade cover. Reverse or replace the blade making sure to locate it on the pin. Close the blade cover...



...and rotate the squeeze lever back into the handle until it **snaps** in place. Unlock knife and test the squeeze lever to be sure it is working properly.



It is important that the cutter is clean and free from foreign debris to ensure the safety feature will work properly.

MARTOR
Solingen

If you have any questions, please contact us.

T: +49 212 25805-0
F: +49 212 25805-55
E-Mail: info@martor.de
Web: www.martor.com

Waste management of blades:



Used blades must be put into an approved disposal container.



MARTOR SAFEBOX No. 108000 - another novel contribution to SAFETY: Designed for SAFE deposition of used blades. To empty the contents, fold the „outer case“ back by 180 degrees.



The transparent cover can now be opened and the contents be emptied, preferably, into the MARTOR USED BLADE CONTAINER No. 9810 - WALL MOUNT BRACKET optional.